


TRANCAS RÚSTICAS

BARRA P/TRANCA

À SEU A

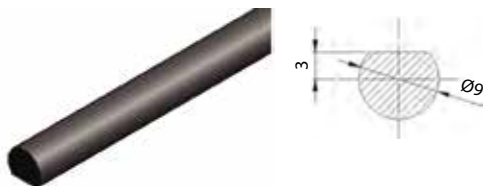

Código

A

Acabamento

1507002

1200

PRETO

1507004

1600

PRETO

1507007

2200



PRETO

SI CONSULTA: OUTRAS MEDIDAS

KIT FERRAGENS 7014 P/TRANCA

Código

1507014

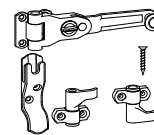

SUPORTE 7018 P/TRANCA

Código

3 x 1507018



SUPORTE 7019 P/TRANCA


Código

2 x 1502910



BARRA P/TRANCA C/TERMINAL

À SEU A

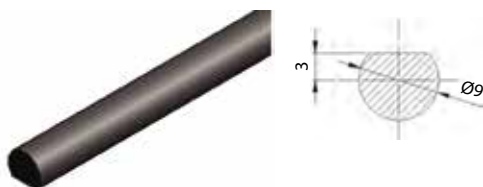

Código

A

Acabamento

1507002

1200

PRETO

1507004

1600

PRETO

1507007

2200


PRETO

SI CONSULTA: OUTRAS MEDIDAS

KIT FERRAGENS 7014 P/TRANCA

Código

1507014

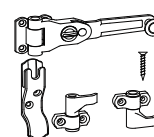

SUPORTE 7018 P/TRANCA

Código

3 x 1507018



KIT TERMINAL 7023/7024 C/ MOLA

Código

1507023

